

### MAINTENANCE SCHEDULE - NATO VEHICLES 15,000 km/9,000 miles

Includes updates until **DECEMBER '06**

New information: RAV4 from October 2006 production

## MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary.  
R: Replace or change or lubricate.

GASOLINE ENGINE													RAV4	RAV4		
SERVICE INTERVALS: Odometer reading or months, whichever comes first				ODOMETER READING										Months  ( ): for reference	2AZ-FE (2.4)	2GR-FE (3.5 V6)
			× 1,000 km	1   7.5   15	22.5   30   37.5	45   52.5   60	67.5   75   82.5	90					ACA33, 38		GSA33, 38	
MAINTENANCE ITEMS			× 1,000 miles	1   4.5   9	13.5   18   22.5	27   31.5   36	40.5   45   49.5	54					06/10		06/10	
Timing Belt				Replace every 150,000 km (90,000 miles)									—			
Valve Clearance (Sensory Inspection)									*I	(Every 72 months)				●		
Drive belt		V-ribbed belt		Inspect 105,000 km (63,000 miles), after 105,000 km Inspect every 15,000 km (9,000 miles)									Initial: 72 and then every 12 months		●	●
Engine oil (API: SH, SJ) (ILSAC)		Normal		R		R		R		R		R	Every 12 months			
		Severe		R R		R R R		R R R		R R R		R	Every 6 months			
Engine oil (API: SJ, SL) (ILSAC)		Normal		R		R		R		R		R	Every 12 months			
		Severe		R R		R R R		R R R		R R R		R	Every 6 months			
Engine oil (API: SL, SM) (ILSAC)		Normal		R		R		R		R		R	Every 12 months		●	●
		Severe		R R		R R R		R R R		R R R		R	Every 6 months		●	●
Engine oil filter		Normal		R		R		R		R		R	Every 12 months		●	●
		Severe		R R		R R R		R R R		R R R		R	Every 6 months		●	●
Cooling and heater system *1						I		I				I	Every 24 months		●	●
Engine coolant		LLC (red/green) *2						R				R	Initial: 36 months			
		S-LLC (pink) *3				I		I				I			●	●
		First replace at 150,000 km (90,000 miles); after, every 90.000 km (54.000 miles)												●	●	
Exhaust pipes and mountings						I		I				I	Every 24 months		●	●
Spark plugs		Platinum or Iridium Tipped type		Replace every 90,000 km (54,000 miles)									—		●	●!!
		Others				I		R				I	I: Every 24 months R: Every 48 months			
Air cleaner filter (from October 2002, applicable to all models in production)		Normal		I		I		I		R		I	I: Every 24 months R: Every 48 months		●	●
		Dusty road		I I		I I I		I I R		I I I		I	I: Every 12 months R: Every 48 months		●	●
Air cleaner filter		Normal		I		I		R		I		R	I: Every 24 months R: Every 48 months			
		Dusty road		Inspect every 2,500 km(1,500 miles) and replace every 45,000 km(27,000 miles) or 48 months.									—			
Fuel tank cap, fuel lines, connections and fuel vapor control valve						I		I				I	Every 24 months		●	●

!!: It is imperative to use DENSO-manufactured spark plugs type FK20HR11 or equivalent to ensure full engine performance.

New information: RAV4 from October 2006 production

T: Tighten to specified torque.

R: Replace or change or lubricate.

SERVICE INTERVALS: Odometer reading or months, whichever comes first				ODOMETER READING													NATO RAV4 2WD	NATO RAV4 4WD		
			× 1,000 km	1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	Months	ACA38 GSA38	ACA33 GSA33	
MAINTENANCE ITEMS			× 1,000 miles	1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54		06/10	06/10	
Clutch pedal, return spring and damper - Mechanical type							I					I				I				
Brake pedal and parking brake							I					I				I	Every 24 months	●	●	
Brake linings and drums (Include brake linings of parking brake)		Normal					I					I				I	Every 24 months			
		Severe			I		I		I		I		I		I	I	Every 12 months			
Brake pads and discs		Normal				I		I		I		I				I	Every 12 months	●	●	
		Severe			I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months	●	●	
Clutch fluid	SAE J1703 or FMVSS No. 116 DOT3						I					I				I	Every 24 months			
Brake fluid	SAE J1703 or FMVSS No. 116 DOT3						R					R				R	Every 24 months	●	●	
Brake pipes and hoses							I					I				I	Every 24 months	●	●	
Power steering fluid		A/T fluid DEXRON® II or III					I					I				I	Every 24 months			
Steering wheel, linkage and steering gear box oil		Normal					I					I				I	Every 24 months	●	●	
		Severe			I		I		I	I		I		I		I	Every 12 months	●	●	
Propeller shaft	NLGI No. 1 or No. 2	Normal				L	L	L		L	L	L		L		L	Every 24 months			
		Severe			L	L	L	L	L	L	L	L	L	L	L	L	Every 12 months			
	NLGI No. 2	Normal																		
		Severe																		
	Tightening bolts for propeller shaft	Normal					T					T				T	Every 24 months			
		Severe			T		T		T	T		T		T		T	Every 12 months			
Drive shaft boots		Normal					I					I				I	Every 24 months	●	●	
		Severe			I		I		I	I		I		I		I	Every 12 months	●	●	
Tightening bolts for drive shaft		Normal					T					T				T	Every 24 months		●	
		Severe			T		T		T	T		T		T		T	Every 12 months		●	
Suspension ball joints and dust covers		Normal					I					I				I	Every 24 months	●	●	
		Severe			I		I		I	I		I		I		I	Every 12 months	●	●	
Automatic transmission fluid	T-IV	Normal								I						I	Every 36 months			
		Severe								I						R	I: Every 36 months R: Every 72 months			
	WS	Normal								I						I	Every 36 months			
		Normal											I				Every 48 months	●	●	
	Severe									I						R	I: Every 36 months R: Every 72 months	●	●	
																R	I: Every 36 months R: Every 72 months			
Other	Normal									I						R	I: Every 36 months R: Every 72 months			
	Severe						I			R		I				R	I: Every 18 months R: Every 36 months			
Manual transmission oil and transfer oil if so equipped (Including auto clutch system)		API Gear oil GL-4 or GL-5	Normal									I					Every 48 months			
			Severe										R					Every 48 months		
		Other (GL-4 or GL-5)	Normal									I					I	Every 48 months		
			Severe									R					R	Every 48 months		
Transfer oil	API Gear oil GL-4 or GL-5		Normal								I					I	Every 48 months			
			Severe								R					R	Every 48 months			
	Gear oil API: GL-5								R				R			R	Every 48 months		●	
	API Gear oil GL-5		Normal								I					I	Every 48 months			
			Severe								R					R	Every 48 months			

MAINTENANCE SCHEDULE - NATO VEHICLES 15,000 km/9,000 miles

Includes updates until **DECEMBER '06**

New information: RAV4 from October 2006 production

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary. T: Tighten to specified torque.  
R: Replace or change or lubricate. L: Lubricate

CHASSIS AND BODY 2/2

SERVICE INTERVALS: Odometer reading or months, whichever comes first						ODOMETER READING													NATO RAV4 2WD	NATO RAV4 4WD	
					× 1,000 km	1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	Months	ACA38 GSA38	ACA33 GSA33
MAINTENANCE ITEMS					× 1,000 miles	1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54			06/10
Front Differential oil*2	Differential integrated with transmission	M/T model	API Gear oil GL-4 or GL-5		Normal						I							Every 48 months			
					Severe						R							Every 48 months			
		A/T model	T-IV	Normal						I							I	Every 36 months			
				Severe						I							R	I: Every 36 months R: Every 72 months			
			WS	Normal						I								Every 48 months	●	●	
				Severe						I							R	I: Every 36 months R: Every 72 months	●	●	
			Other	Normal						I							R	I: Every 36 months R: Every 72 months			
				Severe	I					R			I			R	I: Every 18 months R: Every 36 months				
	Differential separated from transmission (API Gear oil GL-5)										R							R	Every 48 months		
	Rear differential oil			API Gear oil GL-5							R							R	Every 48 months		●
Front and rear suspension					Normal						I							I	Every 24 months	●	●
					Severe	I					I			I			I	Every 12 months	●	●	
Bolts and nuts on chassis and body					Severe only		T		T		T		T		T		T		Every 12 months	●	●
Tires and inflation pressure					Normal						I							I	Every 24 months	●	●
					Severe	I					I			I			I	Every 12 months	●	●	
Air conditioning filter (not a dealer operation) *3		Particle filter (standard & high efficiency type)		Normal						R							R		●	●	
				Dusty road	R					R			R			R		●	●		
		Combination filter (high efficiency type)		Normal	R					R			R			R					
				Dusty road	R		R	R	R	R	R	R	R	R	R						
Corrosion Inspection										I							I	Every 24 months			

\*2: Including MR2 rear differential oil  
\*3: Customers should inspect by themselves

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

Includes updates from MARCH until JUNE '08

New information: TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor Change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS, SC running change; iQ new model; Avensis Full Model Change

Fill operation added; Fuel Injection system maintenance added (Lexus IS250, GS300 and LS460 for Croatia only)

MAINTENANCE OPERATIONS																RAV4	
GASOLINE ENGINE		R: Replace or change or lubricate. F: Fill															
SERVICE INTERVALS:			ODOMETER READING												Months	1AZ-FE (2.0)	
Odometer reading or months, whichever comes first		× 1,000 km	1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5		90	ACA30
MAINTENANCE ITEMS		× 1,000 miles	1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5		54	( ) : for reference
Timing Belt			Replace every 150,000 km (90,000 miles)													—	
Valve Clearance (Sensory Inspection)*1															*1	(Every 72 months)	●
Drive belt		V-ribbed belt	Inspect 105,000 km (63,000 miles), after 105,000 km Inspect every 15,000 km (9,000 miles)													Initial: 72 and then every 12 months	●
Engine oil (API: SH, SJ) (ILSAC)		Normal	R			R			R		R		R		R	Every 12 months	
		Severe	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months		
Engine oil (API: SJ, SL) (ILSAC)		Normal	R			R			R		R		R		R	Every 12 months	
		Severe	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months		
Engine oil (API: SL, SM) (ILSAC)		Normal	R			R			R		R		R		R	Every 12 months	●
		Severe	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	●	
Engine oil filter		Normal	R			R			R		R		R		R	Every 12 months	●
		Severe	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	●	
Cooling and heater system *2			I			I			I			I			Every 24 months	●	
Engine coolant		LLC (red/green) *3							R			R			Initial: 36 months		
		S-LLC (pink) *4	I			I			I			I				●	
			First replace at 150,000 km (90,000 miles); after, every 90,000 km (54,000 miles)														●
Inverter coolant		S-LLC (pink) *4				I			I			I					
			First replace at 150,000 km (90,000 miles); after, every 90,000 km (54,000 miles)														
Exhaust pipes and mountings			I			I			I			I			Every 24 months	●	
Spark plugs		Platinum or Iridium Tipped type	Replace every 90,000 km (54,000 miles)													—	●
		Others	I			R			I			I			I: Every 24 months R: Every 48 months		
Battery			No maintenance													—	
Fuel filter (Aygo only)			Replace every 180,000 km (108,000 miles)													15 years	
Fuel injection system			F	F		F	F		F	F		F	F		F	—	
Air cleaner filter (from October 2002, applicable to all models in production)		Normal	I			I			I		R		I		I	I: Every 24 months R: Every 48 months	●
		Dusty road	I	I	I	I	I	I	I	I	R	I	I	I	I	I: Every 12 months R: Every 48 months	●
Air cleaner filter		Normal	I			I			R		I		I		R	I: Every 24 months R: Every 48 months	
		Dusty road	Inspect every 2,500 km(1,500 miles) and replace every 45,000 km(27,000 miles) or 48 months.													—	
Fuel tank cap, fuel lines, connections and fuel vapor control valve			I			I			I			I			Every 24 months	●	
Charcoal canister		*5										I			—	●	
		Others							I			I			Every 24 months	●	
		Aygo only	Normal										I			—	
Severe							I			I			Every 24 months				
Charcoal canister filter		Aygo only	Normal										R			—	
			Severe							R			R			Every 24 months	

\*1: Check for tappet noise and engine vibration and adjust if necessary.

\*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary

\*3: After 60,000 km (36,000 miles) or 36 months, replace every 30,000 km (18,000 miles) or 24 months.

\*4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)

\*5: For Sweden, Norway and Finland only.

\*6: Use Toyota Genuine Fuel Injector Cleaner (08813-00820) or equivalent

**MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles**

6/23/2008

Includes updates from **MARCH until JUNE '08**

New information: Lexus IS Minor Change 08/08; TMMF Yaris Minor Change 08/11; LC120 and LC V8 running change; iQ new model; Avensis Full Model change

Engine oil layout adjusted (information not changed)

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary.

R: Replace or change or lubricate.

S: Special

C: Clean

**DIESEL ENGINE**

SERVICE INTERVALS: Odometer reading or months, whichever comes first			ODOMETER READING												Months ( ): for reference	2AD-FTV (2.2 D-4D)	2AD-DPR (2.2 D-4D) DPR	2AD-FHV (2.2 D-CAT)	
		× 1,000 km	1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5		90	ALA30	ALA30	ALA30
MAINTENANCE ITEMS		× 1,000 miles	1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5		54	05/11	07/01	05/11
Timing Belt		*6	I																
			Replace every 105,000 km (60,000 miles)												—				
			Replace every 150,000 km (90,000 miles)												—				
Timing pulley*6			I																
Timing belt cover*6			C																
Valve Clearance	*I : Sensory Inspection								*I						*I	(Every 48 months)			
	A: Adjust			A			A		A	A			A		A	Every 12 months			
Drive belt	Normal belt			I			I		I	I			I		I	Every 12 months			
	V-ribbed belt		Inspect at 105.000 km (63.000 miles). After, inspect every 15.000 km (9.000 miles)												Initial 72 months; then, every 12 months	●	●	●	
Engine oil (ACEA: B1; API: CF-4 or CF)*1 *: Engines WITHOUT DPF		Normal				R			R			R			R	Every 12 months	●	●	
		Severe		R	R		R	R	R		R	R	R		R	Every 6 months	●	●	
		OMMS	Replace when the reminder light illuminates or after max. 30,000km/24months												●		●		
Engine oil (ACEA: C2 preferred or B1; API: CF-4 or CF)*1 *: Engines WITH DPF		Normal				R			R			R			R	Every 12 months		●	
		Severe		R	R		R	R	R		R	R	R		R	Every 6 months		●	
		OMMS	Replace when the reminder light illuminates or after max. 30,000km/24months												●	●			
Engine oil filter		Normal				R			R			R			R	Every 12 months	●	●	
		Severe		R	R		R	R	R		R	R	R		R	Every 6 months	●	●	
		OMMS	Replace when the reminder light illuminates or after max. 30,000km/24months												●	●	●		
Cooling and heater system *2						I			I			I			I	Every 24 months	●	●	
Engine coolant	LLC (red/green) *3								R			R			R	Initial: 36 months			
	S-LLC (pink) *4					I			I			I			I		●	●	
			First replace at 150,000 km (90,000 miles); after, every 90.000 km (54.000 miles)												●	●	●		
Exhaust pipes and mountings				I			I		I			I			I	Every 12 months			
						I			I			I			I	Every 24 months	●	●	
Battery			No maintenance												—				
Fuel injection pipes			Replace every 150,000 km (90,000 miles)												—				
Fuel filter									R							Every 72 months	●	●	
	In-tank filter and in-line filter											R				Every 90 months			
Fuel pump			Replace every 300,000 km (180,000 miles)																
Diesel smoke								I							I	Every 48 months			
								I								Every 48 months	●	●	
Air cleaner filter (from October 2002, applicable to all models in production)	Normal			I			I		R			I			I	I: Every 24 months R: Every 48 months	●	●	
	Dusty road		I	I		I	I	I	I	I	R	I	I	I	I	I: Every 12 months R: Every 48 months	●	●	
Air cleaner filter	Normal			I			R		I			I			R	I: Every 12 months R: Every 48 months			
	Dusty road		Inspect every 2,500 km (1,500 miles) and replace every 45,000 km (27,000 miles) or 48 months.												—				
Air flow meter (for EURO IV vehicles)*5									S							Every 48 months			
Fuel tank cap, fuel lines, connections						I			I						I	Every 24 months	●	●	

\*1: You may also use API CE or CD.

\*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary

\*3: After 60,000 km (36,000 miles) or 36 months, replace every 30,000 km (18,000 miles) or 24 months.

\*4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)

\*5: Blow air to the sensor intermittently for about 30 seconds

\*6: For vehicles often operated in extremely dusty conditions, such as mining. Inspect for cracks on the timing belt and abnormal wear on the timing pulley.

Remove dust and sand from the timing belt cover.

NMSC's chdNMSC's chdNMSC's choice

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

Includes updates from **MARCH** until **JUNE '08**

New information: Manual transmission oil "API Gear oil GL-5" added; TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS and SC running change; IQ new model; Avensis Full Model Change  
Aygo 1.0p Clutch mechanism: Inspection interval shortened; Clutch fluid Replacement added for new MMT's; Toyota Genuine CVTF maintenance added for new CVT's

Transfer oil "Toyota Genuine ATF WS" added for LS460(L) 4WD.

MAINTENANCE OPERATIONS

Correction: Lexus IS Manual transmission oil changed to "API Gear oil GL-5" only

I: Inspect and correct or replace as necessary.

T: Tighten to specified torque.

R: Replace or change or lubricate.

L: Lubricate

CHASSIS AND BODY 1/2

SERVICE INTERVALS:

SERVICE INTERVALS:			ODOMETER READING												Months		RAV4 ACA30 ALA30	ALA30	
			× 1,000 km × 1,000 miles	1 1	7.5 4.5	15 9	22.5 13.5	30 18	37.5 22.5	45 27	52.5 31.5	60 36	67.5 40.5	75 45	82.5 49.5	90 54	05/11	07/01	
MAINTENANCE ITEMS																			
Clutch pedal, return spring and damper - Mechanical type					I		I		I	I		I	I						
Brake pedal and parking brake							I			I			I				●	●	
Brake linings and drums (Include brake linings of parking brake)			Normal				I			I			I				●	●	
			Severe		I		I	I	I	I		I	I				●	●	
Brake pads and discs			Normal		I		I	I	I	I		I	I				●	●	
			Severe	I	I	I	I	I	I	I	I	I	I	I			●	●	
Clutch fluid	SAE J1703 or FMVSS No. 116 DOT3						I						I				●	●	
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4						I			I			I						
	SAE J1704 or FMVSS No. 116 DOT4						R			I			R						
Clutch fluid for auto clutch system							R			R			R						
Sequential M/T system fluid							I			I			I						
Brake fluid	SAE J1703 or FMVSS No. 116 DOT3						R			R			R				●	●	
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4						R			R			R						
	SAE J1704 or FMVSS No. 116 DOT4						R			R			R						
Brake pipes and hoses							I			I			I				●	●	
Vacuum pump for brake booster (Diesel engines only)			ixetic (Luk-AT) or Pierburg Others	Replace every 195,000 km (121,000 miles) or 120 months Inspect every 195,000 km (121,000 miles) or 120 months													●	●	
Power steering fluid			A/T fluid DEXRON® II or III TOYOTA P.S. fluid EH or equivalent				I			I			I						
Steering wheel, linkage and steering gear box			Normal Severe				I			I			I				●	●	
SRS airbag *1				Initial inspect at first 120 months from the vehicle registration date.															
Propeller shaft	NLGI No. 1 or No. 2		Normal		L	L	L	L	L	L	L	L	L	L	L	L	Every 24 months		
			Severe	L	L	L	L	L	L	L	L	L	L	L	L	Every 12 months			
Propeller shaft bolts			Normal				T			T			T			T	Every 24 months		
			Severe	T		T	T	T	T		T		T		T	Every 12 months			
Drive shaft boots			Normal				I		I	I		I	I		I	I	Every 24 months	●	●
			Severe	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	●	●	
			Normal	I		I	I	I	I	I	I	I	I	I	I	Every 6 months			
Drive shaft bolts			Normal				T			T			T			T	Every 24 months	●	●
			Severe	T		T	T	T	T	T	T	T	T	T	T	Every 12 months	●	●	
			Normal	T		T	T	T	T	T	T	T	T	T	T	Every 12 months			
Suspension ball joints and dust covers			Severe	T	T	T	T	T	T	T	T	T	T	T	T	T	Every 6 months		
			Normal				I			I			I		I	Every 24 months	●	●	
			Severe	I		I	I	I	I	I	I	I	I	I	I	Every 12 months	●	●	
Shift lever of 6-speed manual transmission							I			I			I			--	●*	●	
Automatic transmission fluid	Vehicles produced before July, '99		Normal				I			R			I			I	I: Every 12 months R: Every 48 months		
			Severe	I		R	I	R		I		R		R	I: Every 12 months R: Every 24 months				
	Vehicles produced after August, '99		Toyota Genuine ATF type T-IV	Normal						I				I			Every 36 months		
				Severe						I				R	I: Every 36 months R: Every 72 months				
			Toyota Genuine ATF WS	Normal						I				I			Every 36 months		
				Severe						I				R	I: Every 36 months R: Every 72 months	●	●		
			Toyota Genuine CVTF TC	Normal							I						Every 48 months		
				Severe							I				R	I: Every 36 months R: Every 72 months			
	Other		Normal						I				R		I: Every 36 months R: Every 72 months				
			Severe				I	R		I		R		R	I: Every 18 months R: Every 36 months				
Manual transmission oil and transfer oil if so equipped (Including auto clutch system)	API Gear oil GL-5		Normal							I							Every 48 months		
			Severe							R						Every 48 months			
	API Gear oil GL-4 or GL-5		Normal								I						Every 48 months		
			Severe							R						Every 48 months			
	LV Gear oil API GL-4		Normal								I						Every 48 months	3	3
			Severe							R						Every 48 months	3	3	
Transfer oil	API Gear oil GL-4 or GL-5		Normal							I					I		Every 48 months		
			Severe						R				R		R	Every 48 months			
	API Gear oil GL-5		Normal						R			R		R		Every 48 months	●	●	
			Severe						R			R		R		Every 48 months			
	Toyota Genuine Differential Oil LX85 (API: GL-5)		Normal							I			I		I	Every 48 months			
			Severe						R			R		R		Every 48 months			
	Toyota Genuine ATF WS		Normal							I			I		I	Every 48 months			
			Severe						I			R		R	I: Every 36 months R: Every 72 months				
	API Gear oil GL-5		Normal							R			R		R		Every 48 months		
			Severe						R			R		R		Every 48 months			

\*1: After 120 months from the vehicle registration date, inspect every 24 months.

3: except for transfer oil  
3: except for transfer oil

\*: ALA30 only

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

6/23/2008

Includes updates from MARCH until JUNE '08

New information: TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS and SC running change; iQ new model; Avensis Full Model Change

Toyota Genuine CVTF maintenance added for new CVT's

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary. T: Tighten to specified torque.

R: Replace or change or lubricate.

C: Clean

CHASSIS AND BODY 2/2

SERVICE INTERVALS:					ODOMETER READING												RAV4							
																	ACA30	ALA30						
					× 1,000 km	1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	Months					
MAINTENANCE ITEMS					× 1,000 miles	1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54		05/11	07/01			
Front Differential oil	Differential integrated with transmission	M/T model	API Gear oil GL-4 or GL-5	Normal								I							Every 48 months					
				Severe									R						Every 48 months					
			LV Gear oil API GL-4	Normal										I							Every 48 months	●	●	
				Severe											R						Every 48 months	●	●	
		A/T model	Toyota Genuine ATF type T-IV	Normal									I							I	Every 36 months			
				Normal										I							Every 48 months			
				Severe										I						R	I: Every 36 months R: Every 72 months			
				Normal										I						I	Every 36 months			
			Toyota Genuine ATF WS	Normal										I							Every 48 months	●		
				Severe											I						R	I: Every 36 months R: Every 72 months	●	
				Normal											I						Every 48 months			
				Severe												I					R	I: Every 36 months R: Every 72 months		
		Toyota Genuine CVTF TC	Normal											I						Every 48 months				
			Severe												I					R	I: Every 36 months R: Every 72 months			
Differential separated from transmission (API Gear oil GL-5)										R				R				R	Every 48 months					
Rear differential oil	API Gear oil GL-5									R				R				R	Every 48 months	●	●			
	A/T fluid WS	Normal									I							I	Every 36 months					
		Severe										I							R	I: Every 36 months R: Every 72 months				
Wheel bearing grease (tapered roller type wheel bearing only) and ball joint grease			NLGI No. 2	Normal						R				R				R	Every 24 months					
				Severe			R		R		R		R		R			R	Every 12 months					
Front and rear suspension				Normal					I				I					I	Every 24 months	●	●			
				Severe			I		I		I		I		I			I	Every 12 months	●	●			
Active height control suspension fluid - Suspension fluid AHC or equivalent																		R	—					
Active height control gas chamber													I		I			I	I: initial 48 months; then every 12 months					
Bolts and nuts on chassis and body				Severe only			T		T		T		T		T			T	Every 12 months	●	●			
				Normal					I				I					I	Every 24 months	●	●			
Tires and inflation pressure				Severe			I		I		I		I		I			I	Every 12 months	●	●			
				Normal					I				I					I	Every 24 months					
				Dusty road			I		I		I		I		I			I	Every 12 months					
				Normal					R				R					R	Every 24 months					
				Dusty road			R		R		R		R		R			R	Every 12 months					
				Normal & Dusty road					R				R					R	Every 24 months					
		Foldable type					I		R		I		R		I			R	"Clean" replaced by "Inspect"					
						I	I	I	R	I	I	I	R	I	I	I		R	Refer to TME letter of October 2007					
			Pollen removal type				I		R		I		R		I			R	on "Potential Health Risk From					
							I	R	I	R	I	R	I	R	I	R	I	R	Cleaning of Cabin Air Filter Elements					
		Standard type & high efficiency type	Normal						R				R					R		●	●			
			Dusty road				R		R		R		R		R			R		●	●			
		Combination filter (high efficiency type)	Normal						R		R		R		R			R						
			Dusty road				R	R	R	R	R	R	R	R	R	R	R	R						
Replace when the service indicator light illuminates																								
Corrosion Inspection									I				I					I	Every 24 months	●	●			



**MAINTENANCE SCHEDULE - GENERAL 10,000 km**Includes updates from **MARCH** until **JUNE '08**

New information: Yaris and Lexus IS Minor Change 08/08; Addition of TMMF Yaris, LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avensis Full Model Change

Fuel Injection Cleaner added on Avensis 1AZ and 2AZ

**MAINTENANCE OPERATIONS**

I: Inspect and correct or replace as necessary

R: Replace or change or lubricate.

F: Fill

**GASOLINE ENGINE****SERVICE INTERVALS:**

Odometer reading or months, whichever comes first

		× 1,000 km	1 5 10 15 20				25 30 35 40				45 50 55 60				65 70 75 80				Months ( ): for reference	ACA30 05/11	ACA31 07/01	
MAINTENANCE ITEMS																						
Timing Belt				Replace every 150,000 km												—						
Valve Clearance		Sensory Inspection *1														I				Every 96 months	●	●
Drive belts				I				I				I				I				Every 24 months	●	●
Engine oil (API: SJ, SL) (ILSAC)		Normal	R				R				R				R				Every 12 months			
		Severe	R				R				R				R				Every 6 months			
Engine oil (API: SL, SM) (ILSAC)		Normal	R				R				R				R				Every 12 months	●	●	
		Severe	R				R				R				R				Every 6 months	●	●	
Engine oil filter		Normal	R				R				R				R				Every 12 months	●	●	
		Severe	R				R				R				R				Every 6 months	●	●	
Cooling and heater system *2			First inspect at 40,000km/24months and 80,000km/48months; after, every 20,000km/12months																●	●		
Engine coolant		S-LLC (pink) *4						I								I				Every 24 months	●	●
				First replace at 160,000 km; after, every 80.000 km																●	●	
Inverter coolant		S-LLC (pink) *4						I								I				Every 24 months		
				First replace at 160,000 km; after, every 80.000 km																		
Exhaust pipes and mountings				I				I				I				I				Every 12 months	●	●
Spark plugs		Platinum or Iridium Tipped type		Replace every 100,000 km												—				●	●	
		Others						R								R				Every 48 months		
Battery				I				I				I				I				Every 12 months	●	●
Fuel filter (including the filter in the fuel tank)															R				Every 96 months	●	●	
		Aygo only		R												R				Every 48 months		
Fuel injection system *5				F				F				F				F				--		
			When the "Injector Maintenance Required" message is displayed on the multi-information display																			
Air cleaner filter (including checking pre-air cleaner if equipped)		Paper type	Normal	I				R				I				R				I: Every 24 months R: Every 48 months	●	●
			Dusty road	Inspect every 2,500km/3months and replace every 40,000km/48months.																●	●	
			Normal	I				R				I				R				I: Every 24 months R: Every 48 months		
			Dusty road	I				I				I				R				I: Every 24 months R: Every 48 months		
		TNF (Thin Non-woven Fabrics) type	Normal	Inspect every 10,000km/12months and replace every 100,000km/120months.																		
			Dusty road	Inspect every 5,000km/6months and replace every 100,000km/120months.																		
Fuel tank cap, fuel lines, connections and fuel vapor control valve				First inspect at 40,000km/24months and 80,000km/48months; after, every 20,000km/12months																●	●	
Charcoal canister							I								I				Every 24 months	●	●	
		Aygo only		I				R				I				R				I: Every 24 months R: Every 48 months		
Charcoal canister filter		Aygo only		I				R				I				R				I: Every 24 months R: Every 48 months		

\*1: Check for tappet noise and engine vibration and adjust if necessary.

\*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary

\*4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)

\*5: Toyota genuine fuel injector cleaner (P/N 08813-00820) or equivalent



MAINTENANCE SCHEDULE - GENERAL 10,000 km

Includes updates from MARCH until JUNE '08

New information: Manual transmission oil \*API Gear oil GL-5\* added; Yaris and Lexus IS Minor Change 08/08; Addition of LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avensis new model.

Transfer oil \*Toyota Genuine ATF WS\* added for LS460(L) 4WD.

A/T fluid: \*Toyota Genuine CVTF TC\* added for New Avensis

MAINTENANCE OPE  
MAINTENANCE OPERATIONS

I: Inspect and correct I: Inspect and correct or replace as necessary. T: Tighten to specified torque.

R: Replace or changeR: Replace or change or lubricate. L: Lubricate

CHASSIS AND BODY 1/2

SERVICE INTERVALS:			ODOMETER READING																New RAV4		
Odometer reading or months, whichever comes first																			ACA30	ACA31	
																			Months		
× 1,000 km																					
MAINTENANCE ITEMS																			05/11	07/01	
Clutch pedal			No maintenance																	●	
Clutch pedal return spring and damper			Aygo only																		
Brake pedal and parking brake																					
Brake linings and drums			Normal																Every 6 months	●	●
(Include brake linings of parking brake)			Severe																Every 12 months	●	●
Brake pads and discs			Normal																Every 6 months	●	●
			Severe																Every 3 months	●	●
Brake fluid	SAE J1703 or FMVSS No. 116 DOT3		I: Every 6 months R: Every 24 months																●	●	
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4		I: Every 6 months R: Every 24 months																		
	SAE J1704 or FMVSS No. 116 DOT4		I: Every 6 months R: Every 24 months																		
Clutch fluid	SAE J1703 or FMVSS No. 116 DOT3		I: Every 6 months R: Every 24 months																●		
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4		I: Every 6 months R: Every 24 months																		
	SAE J1704 or FMVSS No. 116 DOT4		I: Every 6 months R: Every 24 months																		
Brake pipes and hoses			Normal																Every 6 months	●	●
			Severe																Every 12 months	●	●
Vacuum pump for brake booster (Diesel engines only)			Luk-AT or Pierburg Others																Replace every 195.000 km (121.000 miles) or 120 months		
Power steering fluid			A/T fluid DEXRON® II or III																Inspect every 200.000 km		
Steering wheel, linkage and steering gear box			Normal																Every 6 months	●	●
			Severe																Every 12 months	●	●
Front wheel alignment (side slip)																			Every 6 months		
SRS airbag *1			Initial inspect at first 120 months from the vehicle registration date.																Every 3 months		
Steering knuckle, drag link, kingpin, center arm and steering linkage grease			NLGI No. 2																Every 6 months		
Propeller shaft			Normal																Every 12 months		
			Severe																Every 6 months		
Tightening bolts for propeller shaft			Normal																Every 12 months		
			Severe																Every 6 months		
Drive shaft boots			Normal																Every 6 months		
			Severe																Every 3 months		
Tightening bolts for drive shaft			Normal																Every 24 months	●	●
			Severe																Every 12 months	●	●
Suspension ball joints and dust covers			Normal																Every 6 months		
			Severe																Every 3 months		
Shift lever for 6-speed manual transmission																			Every 12 months	●	●
																			Every 6 months	●	●
Automatic transmission fluid			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		
			Severe																Every 12 months		
			Normal																Every 24 months		

\*1: After 120 months from the vehicle registration date, inspect every 24 months.

MAINTENANCE SCHEDULE - GENERAL 10,000 km

6/23/2008

Includes updates from MARCH until JUNE '08

New information: Yaris and Lexus IS Minor Change 08/08; Addition of LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avensis new model

Fr diff. oil: "Toyota Genuine CVTF TC" added for New Avensis

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary.

T: Tighten to specified t T: Tighten to specified torque.

R: Replace or change or lubricate.

CHASSIS AND BODY 2/2

SERVICE INTERVALS: Odometer reading or months, whichever comes first					ODOMETER READING																	New RAV4									
				× 1,000 km	1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	Months	ACA30	ACA31							
MAINTENANCE ITEMS																					05/11		07/01								
Front Differential oil	Differential integrated with transmission	M/T model	LV Gear oil API GL-4	Normal						I										I	Every 48 months	●									
				Severe						R										R	Every 48 months	●									
		A/T model	API Gear oil GL-4 or GL-5							I										I	Every 48 months										
										R										R	Every 48 months										
			WS	Normal						I										I	Every 24 months	●	●								
				Severe						I										R	I: Every 24 months R: Every 48 months	●	●								
			T-IV	Normal						I										I	Every 24 months										
				Severe						I										R	I: Every 24 months R: Every 48 months										
			Toyota Genuine CVTF TC	Normal						I										I	Every 24 months										
				Severe						I										R	I: Every 24 months R: Every 48 months										
	Differential separated from transmission (API Gear oil GL-5)				Normal	I					R					I					R	I: Every 12 months R: Every 48 months									
					Severe	R					R					R					R	R: Every 24 months									
						I					R					I					R	I: Every 12 months R: Every 48 months									
Rear differential oil			API Gear oil GL-5	Normal	I					R					I					R	I: Every 12 months R: Every 48 months	●	●								
				Severe	R					R					R					R	Every 24 months	●	●								
							I					R					I					R	I: Every 12 months R: Every 48 months								
			A/T fluid WS	Normal						I										I	Every 24 months										
Severe						I										R	I: Every 24 months R: Every 48 months														
Wheel bearing grease (tapered roller type wheel bearing only)				NLGI No. 2		R					R					R					R	Every 12 months									
Front and rear suspension				Normal	I					I					I					I	Every 12 months	●	●								
				Severe	I					I					I					I	Every 6 months	●	●								
				Normal	I					I					I					I	Every 6 months										
				Severe	I					I					I					I	Every 3 months										
Active height control suspension fluid - Suspension fluid AHC or equivalent				Replace every 100.000 km																		—									
Active height control gas chamber									I					I					I					I: initial 48 months; then every 12 months							
Bolts and nuts on chassis and body				Severe only	T					T					T					T					Every 6 months	●	●				
Tires and inflation pressure									I					I					I					I	Every 6 months	●	●				
Lights, horn, wipers and washers									I					I					I					I	Every 6 months	●	●				
Particle filter		Pollen removal type		Normal	C					C					R					C					C						
				Severe	C					C					R					C					C						
		Standard type		Normal						R										R											
				Severe	R					R					R					R											
		Semi-standard type		Normal & Severe						R										R											
High efficiency type			Normal	R					R					R					R						●	●					
			Severe	R					R					R					R						●	●					
Combination filter		High efficiency type	Normal & Severe	R					R					R					R												
				Replace when the service indicator light illuminates																											
Air conditioner refrigerant amount									I					I					I					I					Every 12 months	●	●

\*3: Customers should inspect by themselves

**MAINTENANCE SCHEDULE - GENERAL 10,000 km**Includes updates until **MARCH '08**

GASOLINE ENGINE																				RAV4	
SERVICE INTERVALS:																				1AZ-FE (2.0)	
Odometer reading or months, whichever comes first			ODOMETER READING																Months ( ) : for reference	ACA21	
		× 1,000 km	1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75		80	04/08
MAINTENANCE ITEMS																					
Timing Belt			Replace every 150,000 km																—		
Valve Clearance	Sensory Inspection *1														I				Every 96 months	●	
Drive belts			I				I				I				I				Every 24 months	●	
Engine oil (API: SJ, SL) (ILSAC)		Normal	R				R				R				R				Every 12 months	●	
		Severe	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	●		
Engine oil (API: SL, SM) (ILSAC)		Normal	R				R				R				R				Every 12 months		
		Severe	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months			
Engine oil filter		Normal	R				R				R				R				Every 12 months	●	
		Severe	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	●		
Cooling and heater system *2			First inspect at 40,000km/24months and 80,000km/48months; after, every 20,000km/12months																●		
Engine coolant	S-LLC (pink) *4						I								I				Every 24 months	●	
		First replace at 160,000 km; after, every 80.000 km																	●		
Inverter coolant	S-LLC (pink) *4						I								I				Every 24 months		
		First replace at 160,000 km; after, every 80.000 km																			
Exhaust pipes and mountings			I				I				I				I				Every 12 months	●	
Spark plugs	Platinum or Iridium Tipped type		Replace every 100,000 km																—	●	
	Others						R								R				Every 48 months		
Battery			I				I				I				I				Every 12 months	●	
Fuel filter (including the filter in the fuel tank)			R																Every 96 months	●	
		Aygo only	R																Every 48 months		
Fuel injection system *5			F F F F F F F F																--		
			When the "Injector Maintenance Required" message is displayed on the multi-information display																		
Air cleaner filter (including checking pre-air cleaner if equipped)	Paper type	Normal	I				R				I				R				I: Every 24 months R: Every 48 months	●	
		Dusty road	Inspect every 2,500km/3months and replace every 40,000km/48months.																	●	
		Normal	I				R				I				R				I: Every 24 months R: Every 48 months		
		Dusty road	I				I				I				I				I: Every 24 months R: Every 48 months		
	TNF type	Normal	Inspect every 10,000km/12months and replace every 100,000km/120months.																	●	
		Dusty road	Inspect every 5,000km/6months and replace every 100,000km/120months.																	●	
Fuel tank cap, fuel lines, connections and fuel vapor control valve			First inspect at 40,000km/24months and 80,000km/48months; after, every 20,000km/12months																●		
Charcoal canister							I								I				Every 24 months	●	
	Aygo only		I				R				I				R				I: Every 24 months R: Every 48 months		
Charcoal canister filter		Aygo only	I				R				I				R				I: Every 24 months R: Every 48 months		

\*1: Check for tappet noise and engine vibration and adjust if necessary.

\*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary

\*4: Only use "Toyota Super Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long life hybrid organic acid technology (= combination of low phosphates and organic acids)

\*5: Toyota genuine fuel injector cleaner (P/N 08813-00820) or equivalent

Includes updates until **MARCH '08**

I: Inspect and correct I: Inspect and correct or replace as necessary. T: Tighten to specified torque.  
R: Replace or change R: Replace or change or lubricate. L: Lubricate

SERVICE INTERVALS: Odometer reading or months, whichever comes first			ODOMETER READING																Months		RAV4								
			1 5 10 15 20				25 30 35 40				45 50 55 60				65 70 75 80						ACA21								
MAINTENANCE ITEMS			× 1,000 km																				04/08						
Clutch pedal			No maintenance																		●								
Clutch pedal return spring and damper			Aygo only						I				I										●						
Brake pedal and parking brake							I				I				I				I				Every 6 months		●				
Brake linings and drums (Include brake linings of parking brake)			Normal		I				I				I				I				I				Every 12 months		●		
			Severe		I				I				I				I				I				Every 6 months		●		
Brake pads and discs			Normal		I				I				I				I				I				Every 6 months		●		
			Severe		I				I				I				I				I				Every 3 months		●		
Brake fluid	SAE J1703 or FMVSS No. 116 DOT3		I				I				R				I				I				I				I: Every 6 months R: Every 24 months		●
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4		I				I				R				I				I				I				I: Every 6 months R: Every 24 months		
	SAE J1704 or FMVSS No. 116 DOT4		I				I				R				I				I				I				I: Every 6 months R: Every 24 months		
Clutch fluid	SAE J1703 or FMVSS No. 116 DOT3		I				I				I				I				I				I				Every 6 months		
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4		I				I				I				I				I				I				Every 6 months		
	SAE J1704 or FMVSS No. 116 DOT4		I				I				I				I				I				I				Every 6 months		
Brake pipes and hoses			Normal		I				I				I				I				I				Every 12 months		●		
			Severe		I				I				I				I				I				Every 6 months		●		
Vacuum pump for brake booster (Diesel engines only)		Luk-AT or Pierburg	Replace every 195,000 km (121,000 miles) or 120 months																										
		Others	Inspect every 200,000 km																										
Power steering fluid		A/T fluid DEXRON® II or III	I				I				I				I				I				Every 6 months		●				
Steering wheel, linkage and steering gear box			Normal		I				I				I				I				I				Every 12 months		●		
			Severe		I				I				I				I				I				Every 6 months				
					I				I				I				I				I				Every 3 months		●		
Front wheel alignment (side slip)							I								I								Every 48 months						
SRS airbag *1			Initial inspect at first 120 months from the vehicle registration date.																										
Steering knuckle, drag link, kingpin, center arm and steering linkage grease			NLGI No. 2		R R R R				R R R R				R R R R				R R R R				Every 3 months								
Propeller shaft			Normal		L L L L				L L L L				L L L L				L L L L				Every 6 months								
			Severe		L L L L				L L L L				L L L L				L L L L				Every 6 months								
Tightening bolts for propeller shaft			Normal		T				T				T				T				Every 12 months								
			Severe		T				T				T				T				Every 6 months								
			Normal		T				T				T				T				Every 6 months								
			Severe		T				T				T				T				Every 3 months								
Drive shaft boots			Normal		I				I				I				I				Every 24 months		●						
			Severe		I				I				I				I				Every 12 months		●						
Tightening bolts for drive shaft			Normal		T				T				T				T				Every 24 months		●						
			Severe		T				T				T				T				Every 12 months		●						
			Normal		T				T				T				T				Every 6 months								
			Severe		T				T				T				T				Every 3 months								
Suspension ball joints and dust covers			Normal		I				I				I				I				Every 12 months		●						
			Severe		I				I				I				I				Every 6 months		●						
					I				I				I				I				Every 6 months								
Shift lever for manual transmission							I				I												--						
Automatic transmission fluid			WS		Normal						I								I				Every 24 months						
					Severe						I								R				I: Every 24 months R: Every 48 months						
			T-IV		Normal						I								I				Every 24 months		●				
					Severe						I								R				I: Every 24 months R: Every 48 months		●				
			A/T fluid D-II or DEXRON III		Normal						I								R				I: Every 24 months R: Every 48 months						
					Severe		I				R				I				R				I: Every 12 months R: Every 24 months						
Manual transmission oil			LV Gear oil API GL-4		Normal						I</																		

\*1: After 120 months from the vehicle registration date, inspect every 24 months

MAINTENANCE SCHEDULE - GENERAL 10,000 km

6/23/2008

Includes updates until MARCH '08

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary. T: Tighten to specified I T: Tighten to specified torque.  
R: Replace or change or lubricate.

CHASSIS AND BODY 2/2

SERVICE INTERVALS: Odometer reading or months, whichever comes first					ODOMETER READING																	RAV4				
				× 1,000 km	1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	Months	ACA21			
MAINTENANCE ITEMS																					04/08					
Front Differential oil	Differential integrated with transmission	M/T model	LV Gear oil API GL-4	Normal						I										I	Every 48 months	●				
				Severe						R										R	Every 48 months	●				
		A/T model	API Gear oil GL-4 or GL-5								I										I	Every 48 months				
											R										R	Every 48 months				
			WS	Normal						I										I	Every 24 months					
				Severe						I										R	I: Every 24 months R: Every 48 months					
				T-IV	Normal						I										I	Every 24 months	●			
					Severe						I										R	I: Every 24 months R: Every 48 months	●			
	Differential separated from transmission (API Gear oil GL-5)			Normal	I					R					I					R	I: Every 12 months R: Every 48 months					
				Severe	R					R					R					R	R: Every 24 months					
				I					R					I					R	I: Every 12 months R: Every 48 months						
Rear differential oil			API Gear oil GL-5	Normal	I					R					I					R	I: Every 12 months R: Every 48 months	●				
				Severe	R					R					R					R	Every 24 months	●				
					I					R					I					R	I: Every 12 months R: Every 48 months					
			A/T fluid WS	Normal						I										I	Every 24 months					
				Severe						I										R	I: Every 24 months R: Every 48 months					
Wheel bearing grease (tapered roller type wheel bearing only)			NLGI No. 2		R					R					R					R					Every 12 months	
Front and rear suspension				Normal	I					I					I					I					Every 12 months	●
				Severe	I					I					I					I					Every 6 months	●
				Normal	I					I					I					I					Every 6 months	
				Severe	I					I					I					I					Every 3 months	
Active height control suspension fluid - Suspension fluid AHC or equivalent					Replace every 100.000 km																—					
Active height control gas chamber										I					I					I					I: initial 48 months; then every 12 months	
Bolts and nuts on chassis and body				Severe only	T					T					T					T					Every 6 months	●
Tires and inflation pressure					I					I					I					I					Every 6 months	●
Lights, horn, wipers and washers					I					I					I					I					Every 6 months	●
Particle filter		Pollen removal type		Normal	C					C					R					C						
				Severe	C					C					R					C						
		Standard type		Normal						R					R											●
				Severe	R					R					R					R						●
		High efficiency type		Normal	R					R					R					R						
				Severe	R					R					R					R						
Combination filter		High efficiency type	Normal & Severe		R					R					R					R						
					Replace when the service indicator light illuminates																					
Air conditioner refrigerant amount					I					I					I					I					Every 12 months	●

\*3: Customers should inspect by themselves